

FGG005 Strongman Striker

a) 1x striker base



c) 1x hammer



d) 1x dinger

e) 2x drop pins



b) 1x striker rod


f) 1x striker back



Fig. 1



Fig. 2

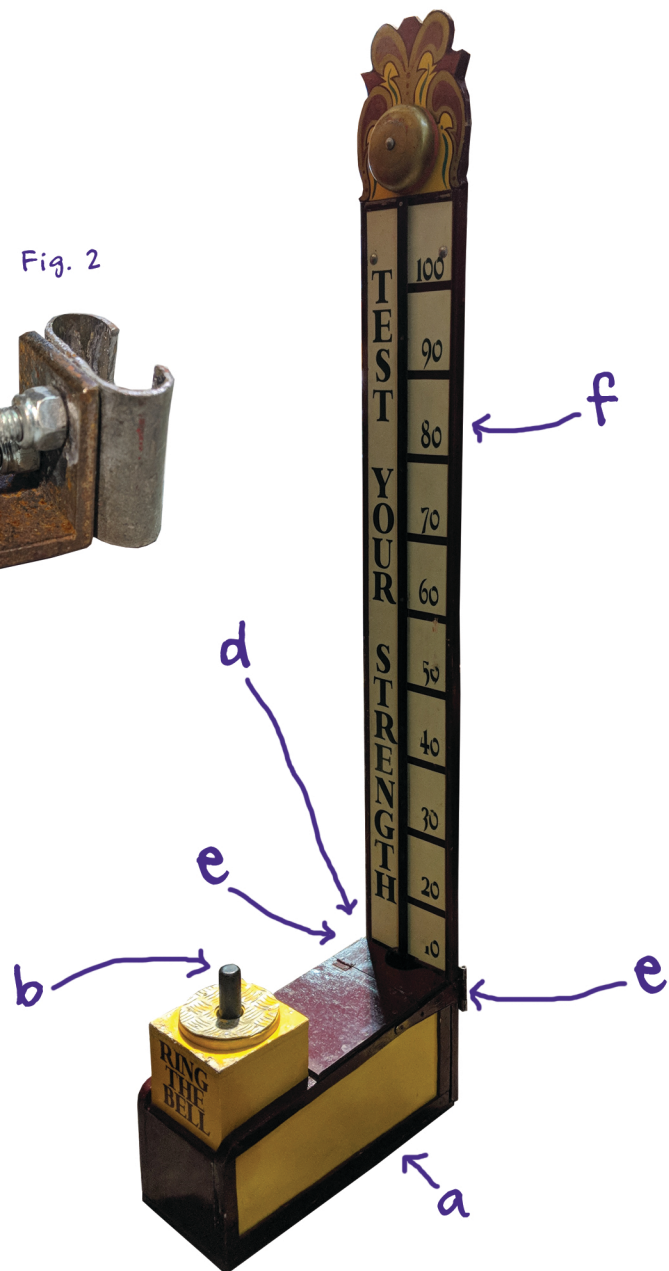

1. Place base on flat ground
2. Slide dinger up metal rod on the striker back board. See Fig.2 for correct way round
3. Place drop pins in each side of the back board to attach to base. See Fig. 1
4. Place striker rod in front hole if it is not there already